

User Manual

For Windows and Macintosh OS

KAMVAS® PRO 22(2019) | Model: GT2201

Precautions

1. Please read this manual carefully before using, and keep it well for future reference.
2. Before cleaning the display please unplug the USB cable and wipe with a soft damp cloth, do not use any kind of detergents.
3. Please don't place the display near water sources such as bathtub, washbasin, sinks, washing machine, damp basement, swimming pool, etc.
4. Do not place the display on where is unstable or a height for children reaching easily in order to avoid danger.
5. Do not place the display and digital pen close to the magnetic field.
6. The grooves and holes on the back case is designed for ventilation to prevent the monitor from overheating. Please don't place the display on beds, sofas, carpets or in embedded device.
7. Only power supplies shown on the nameplate can be used for the display. If you have questions about the power supply which you are using, please consult the distributor of your display.
8. To protect your display, please switch off the power when it is not in use. During blackouts or not using for long time, please unplug the display from the socket.
9. Don't overload the socket or lengthen the power wire, which may lead to electric shocks.
10. Make sure no foreign bodies get inside the monitor through grooves and prevent liquid from splashing on the display as to prevent short-circuit or fire.
11. If the display has a breakdown, do not open the main case and try to repair it by yourself. Please ask for a service for proper repair and maintenance.
12. When the following situations occur, please unplug the power adapter and you may need a service for full repair and maintenance:
 - A. The power wire or plug is damaged or worn out;
 - B. There is liquid splashed inside of the display;
 - C. The display has fallen or the LCD is broken;
 - D. When obvious abnormalities occur to the display.
13. While getting the components replaced, you are supposed to guarantee that the repairman is using the substitute components specified by the manufacturer. Unauthorized component replacement might cause fire, electric shocks or other dangers.

Contents

1. Product Overview.....	3
1.1 Display Introduction.....	3
1.2 Product and Accessories.....	3
1.3 Setting up Display.....	4
1.4 Installing the Driver.....	5
1.5 Pen Nib Replacement.....	13
2. Product Basic Operation.....	14
2.1 Using The Pen.....	14
2.2 OSD Setting.....	16
3. Function Setting.....	19
3.1 Device Connection Prompt.....	19
3.2 Working Area Setting.....	19
3.3 Press Keys Function Setting.....	21
3.4 Pen Button Function Setting.....	22
3.5 Pressure Sensitivity Setting.....	22
3.6 Pen Pressure Testing.....	23
3.7 Calibration.....	23
3.8 Enable the Windows Ink feature.....	24
3.9 Data Export and Import.....	24
4. Specifications.....	25
5. Trouble Shooting.....	26
5.1 Possible Breakdowns Related to DISPLAY.....	26
5.2 Possible Breakdowns Related to FUNCTIONS.....	26

1. Product Overview


1.1 Display Introduction

Thanks for choosing HUION® KAMVAS® Pro 22 Pen display. This is a new generation of desktop-level professional drawing display, which can greatly improve your work efficiency of painting and creation, and full of fun. You can freely painting and writing, depicting different lines and colors, just as the pen writes on the paper, which brings you a real shock experience.

To give you a better understanding and using of your KAMVAS, please read this user manual carefully. The user manual only shows the information under Windows, unless otherwise specified, this information applies to both Windows and Macintosh systems.


1.2 Product and Accessories

1.2.1 Display Overview

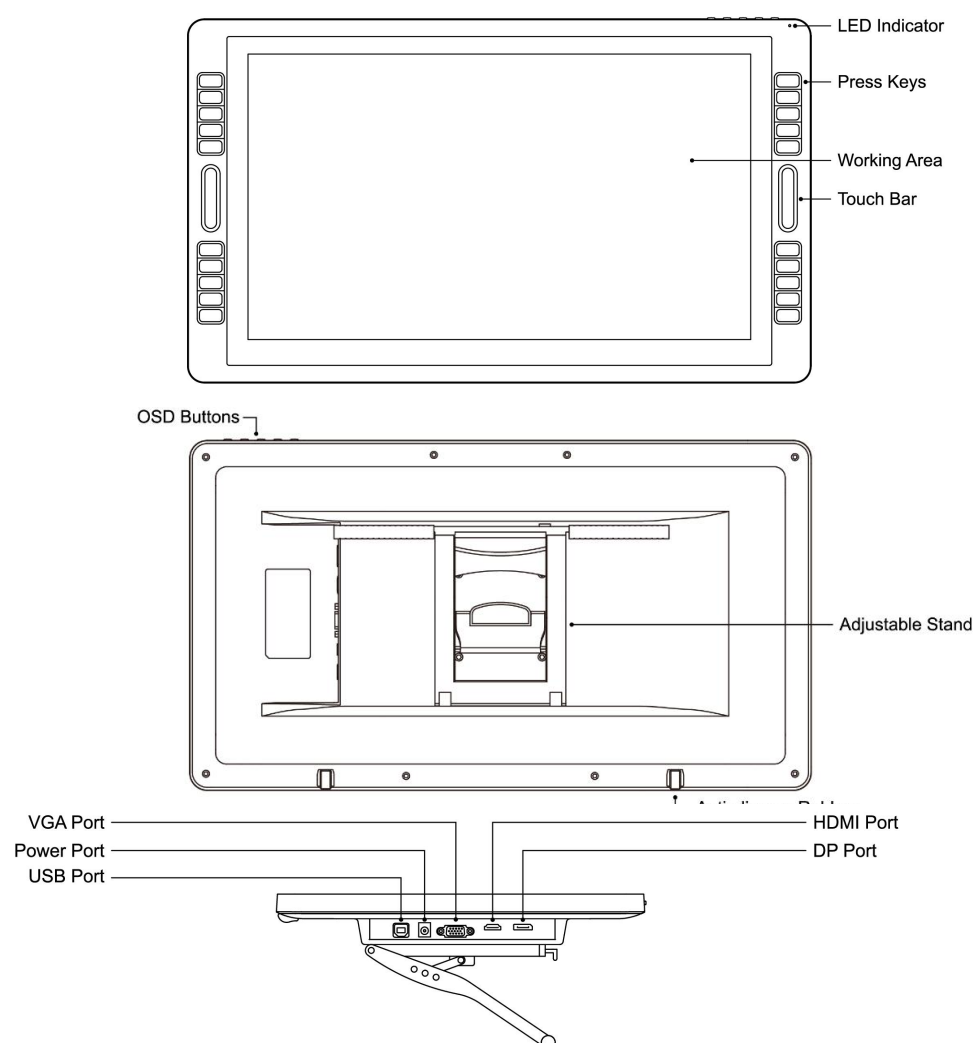


1.2.2 Adjustable Stand

We designed this ergonomic adjustable stand specially for your KAMVAS display, you can adjust the angle of the display according to your usage habit, and make you feel more comfortable when painting and creating.

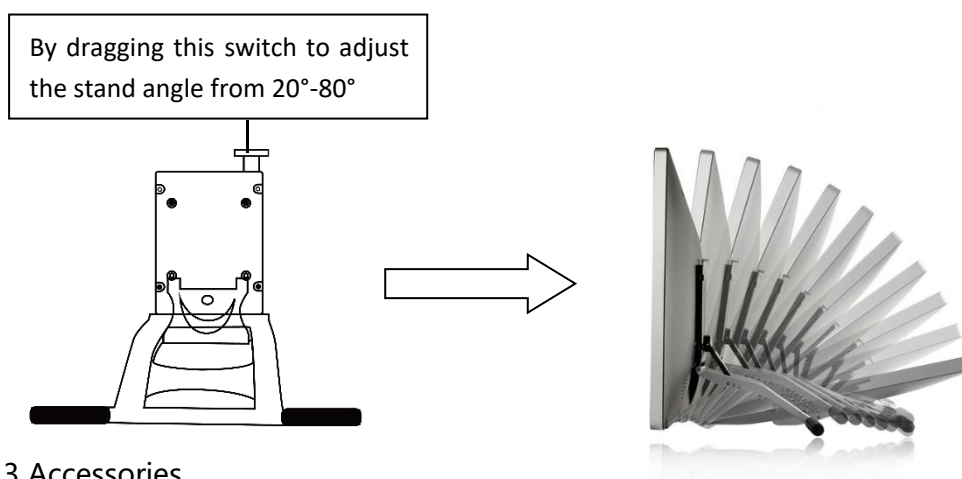


1.2.3 Accessories

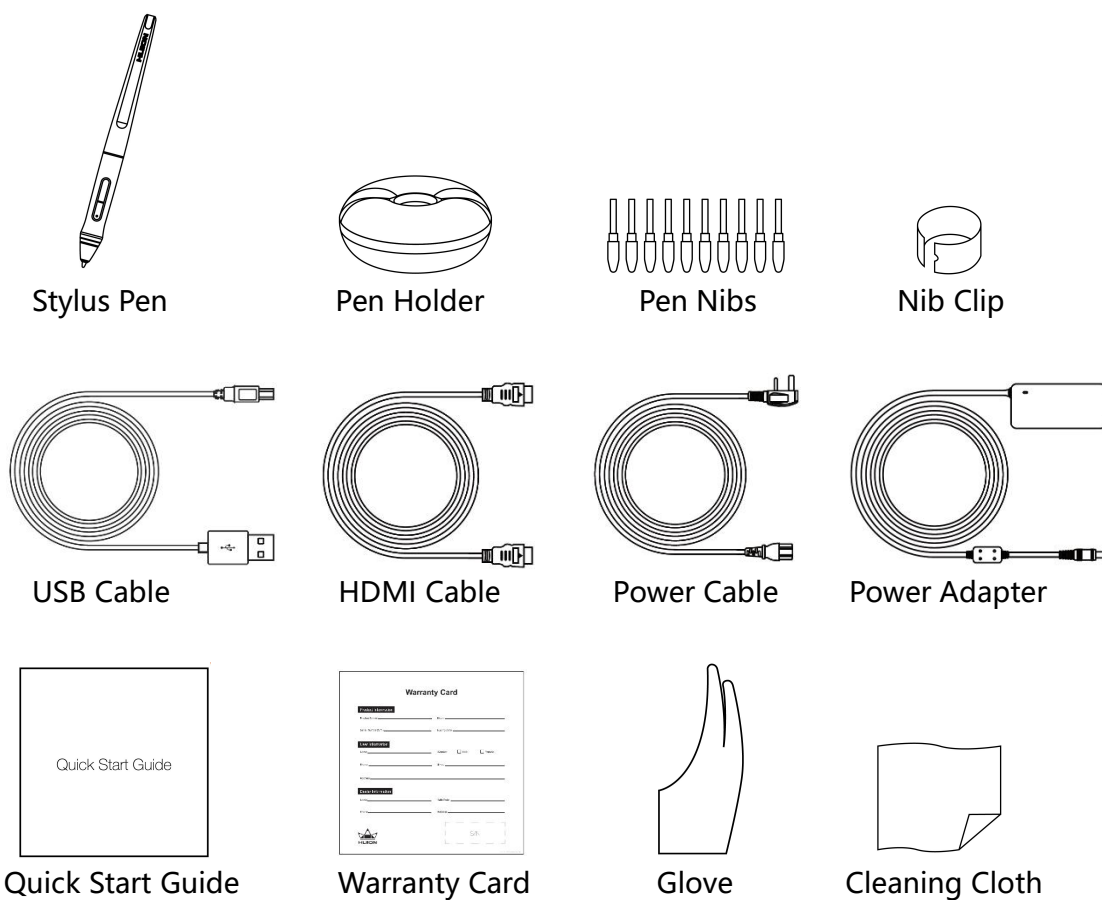


1.3 Setting up Display

1. Take out the pen display and stand from the package, then assemble the stand to the back of the display with attached screwdriver according to the following instruction.

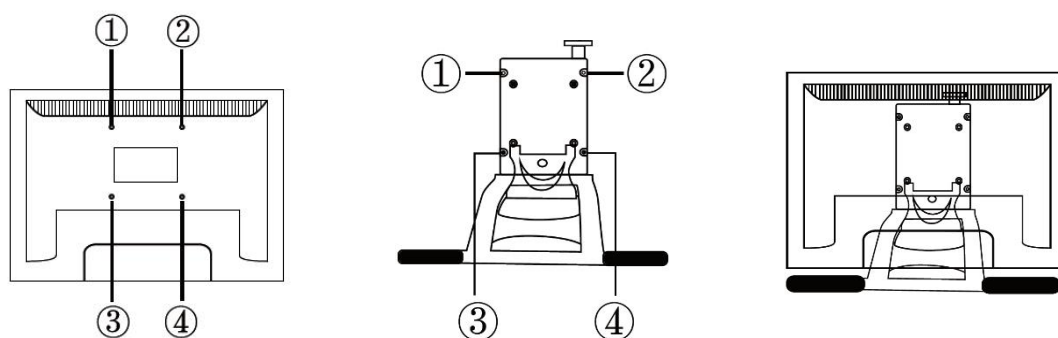

2. As shown on the below, connect the pen display to your computer with attached power adapter, HDMI cable and USB Cable.
3. Press the power button on the bottom of the display to power on the display

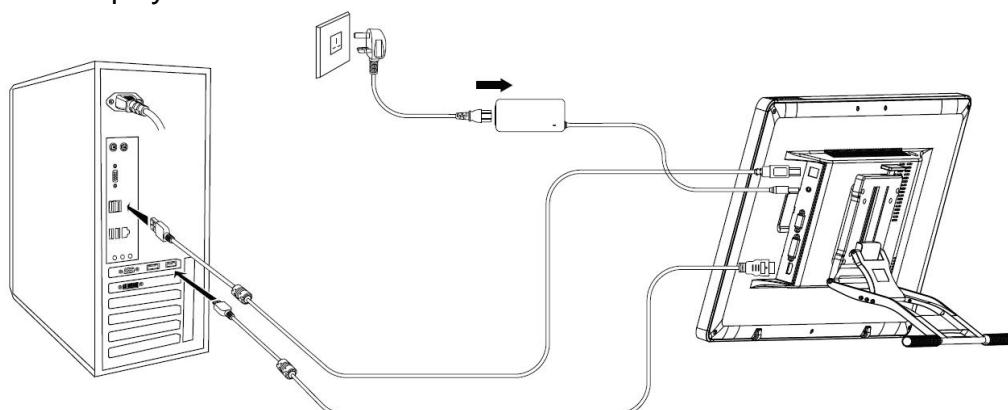



1.4 Installing the Driver

1.4.1 OS Support

Windows 7 or later, macOS 10.12 or later

1.4.2 Install Driver

Please download the driver from our website: www.huion.com/download

After finishing installation, you can find the driver icon  in the system tray area, which means the driver was installed successfully; when you connect the tablet to computer, the icon will change to color , which means the driver has already recognized the tablet and you can start using it now.

Notice:

1. Before installing, you need to uninstall other driver of similar products, including the old driver of this product.
2. Before installing, please close all graphics software and anti-virus software to avoid unnecessary mistake.

1.4.3 How to Install and Uninstall the Drivers on Linux Devices**Notice:**

1. Please remember to close the command window and reboot your Linux device after installing the driver, or the driver will not be useful. After rebooting the device, you can access the system main menu to find the Huion Tablet driver and then open it to finish some settings.
2. If you are running Linux operating system on VMware, you must use the VMware Workstation Pro version. And the Play version of VMware Workstation doesn't support the Huion Tablet driver.
3. Some versions of the Ubuntu operating system don't support using more than one monitor simultaneously. And we recommend you upgrade your system to 20.04 LTS or later if you want to use a Huion painting device on multiple display screens simultaneously smoothly.

Huion Tablet Driver installation packages in 2 different formats are available for Linux devices:

- **tar.xz (file format)**
- **deb (file format)**


Here are the step-by-step instructions for installing the driver packages in different file formats respectively:

1. Instructions for installing the driver package file in tar.xz format.**Linux operating systems supported:**


Ubuntu

Steps to Install:

1. Extract the contents of the driver file, huiontablet_XXXX.tar.xz, into a folder.
2. Open the command window in the folder.

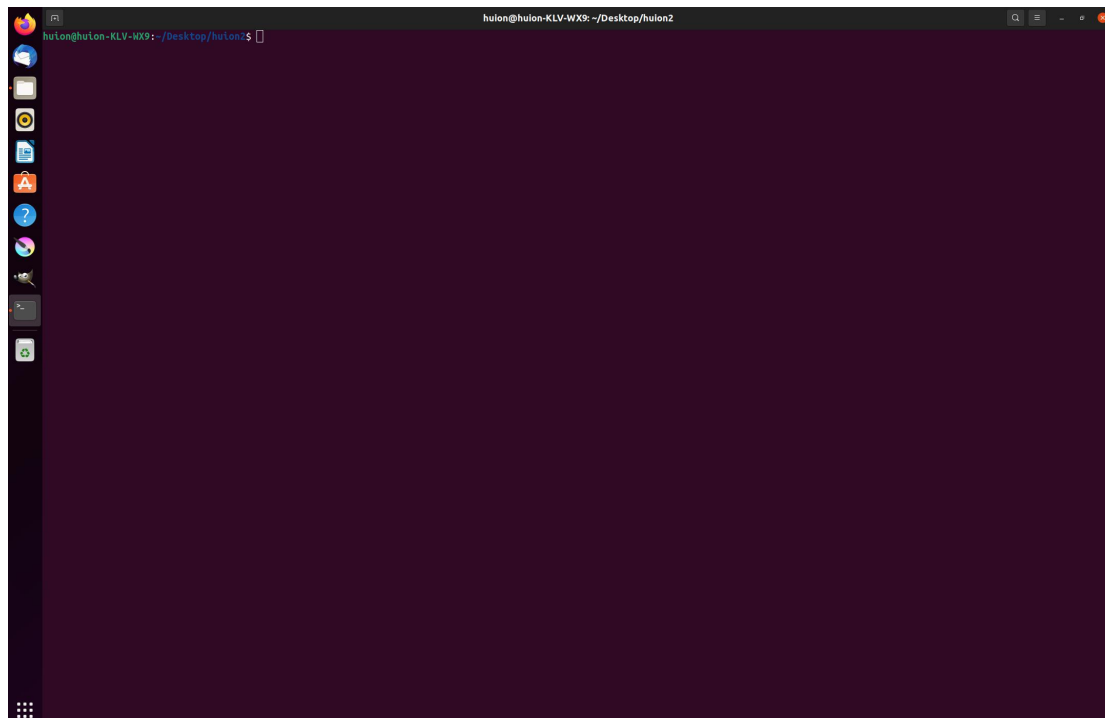

3. Input the following command: "sudo sh install.sh" , and press the enter key on the keyboard to make your Linux device execute it.

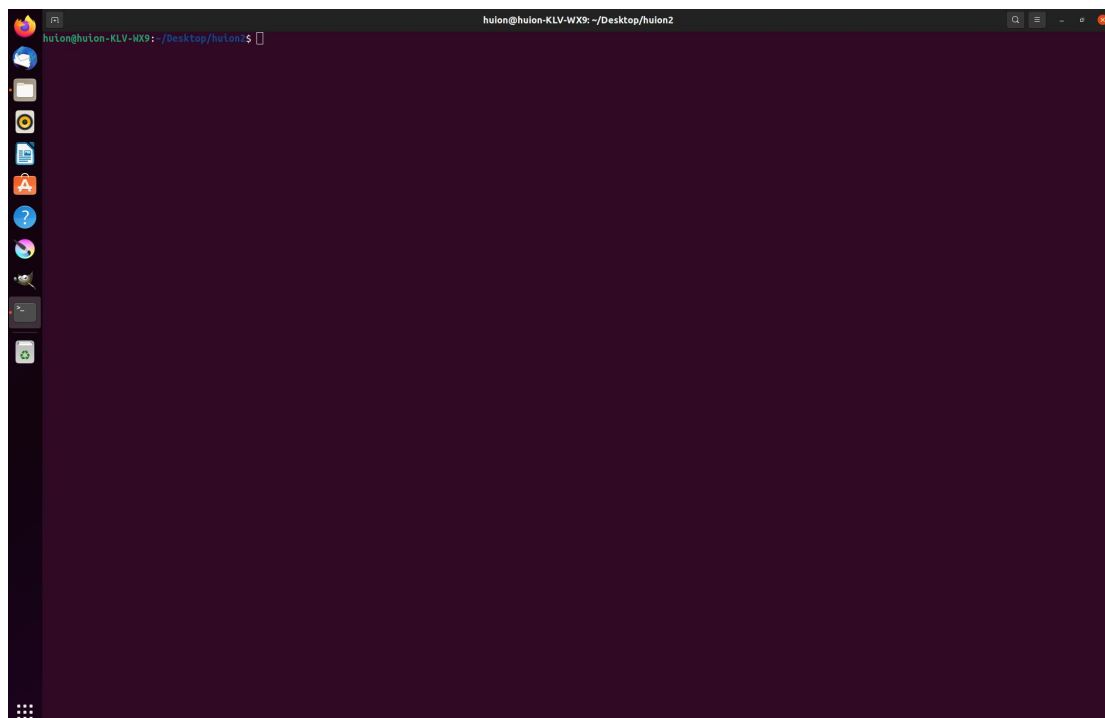


4. Enter the user password to complete the installation.

```

huion@huion-KLV-WX9: ~/Desktop/huion2
[huion@huion-KLV-WX9: ~/Desktop/huion2$ sudo sh install.sh
[sudo] password for huion:
/home/huion/Desktop/huion2/.
/usr/lib
-/huion/huiontablet
Installation Succeeded !
Please reboot your Linux device to run the driver, or the driver will not be useful.
huion@huion-KLV-WX9: ~/Desktop/huion2$


```

5. Please reboot your Linux device to run the driver, or the driver will not be useful.

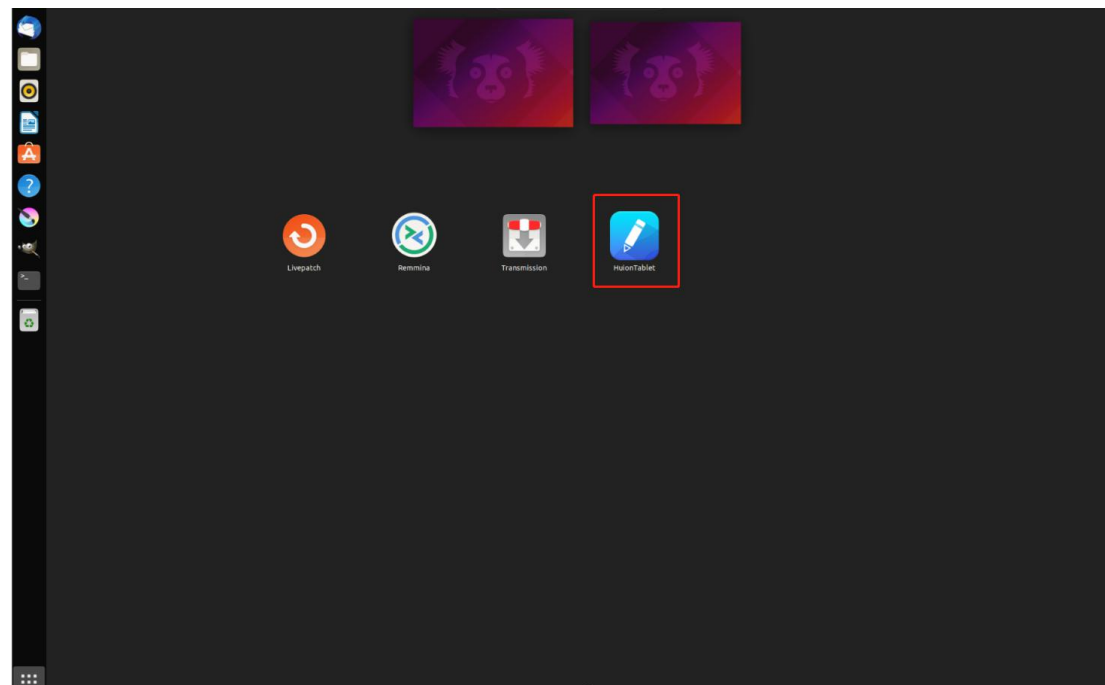


Steps to Uninstall:


1. Open the command window in the folder of the driver.

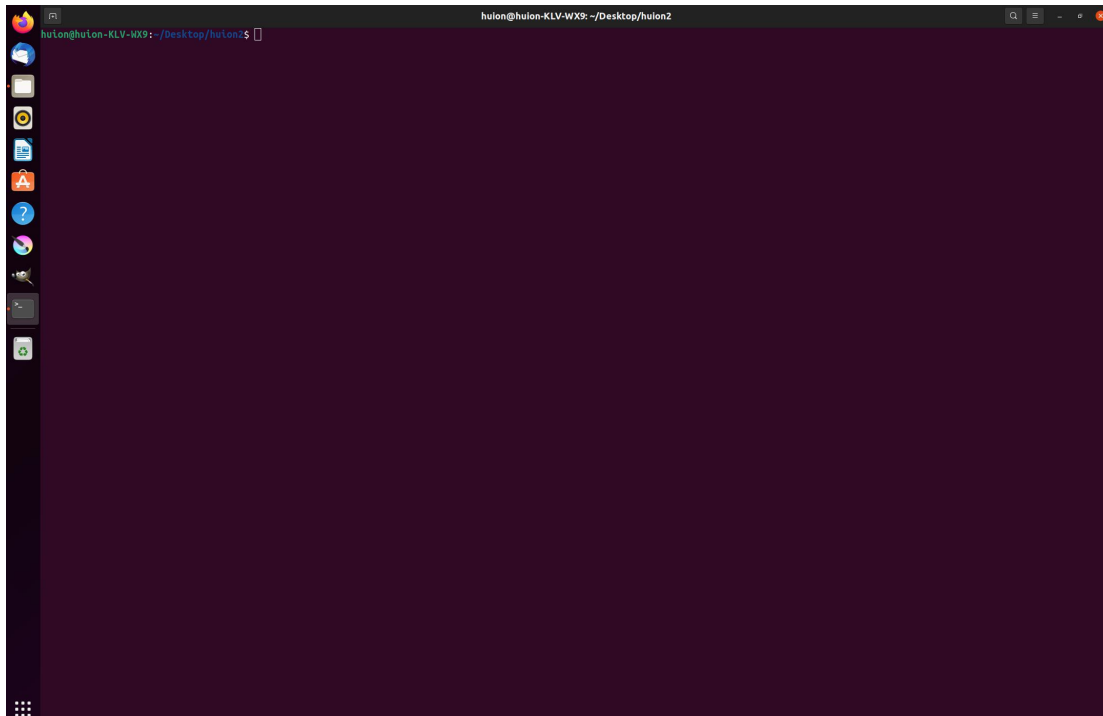

2. Input the following command in the command window: "sudo sh uninstall.sh" , and press the enter key on the keyboard to make your Linux device execute it.

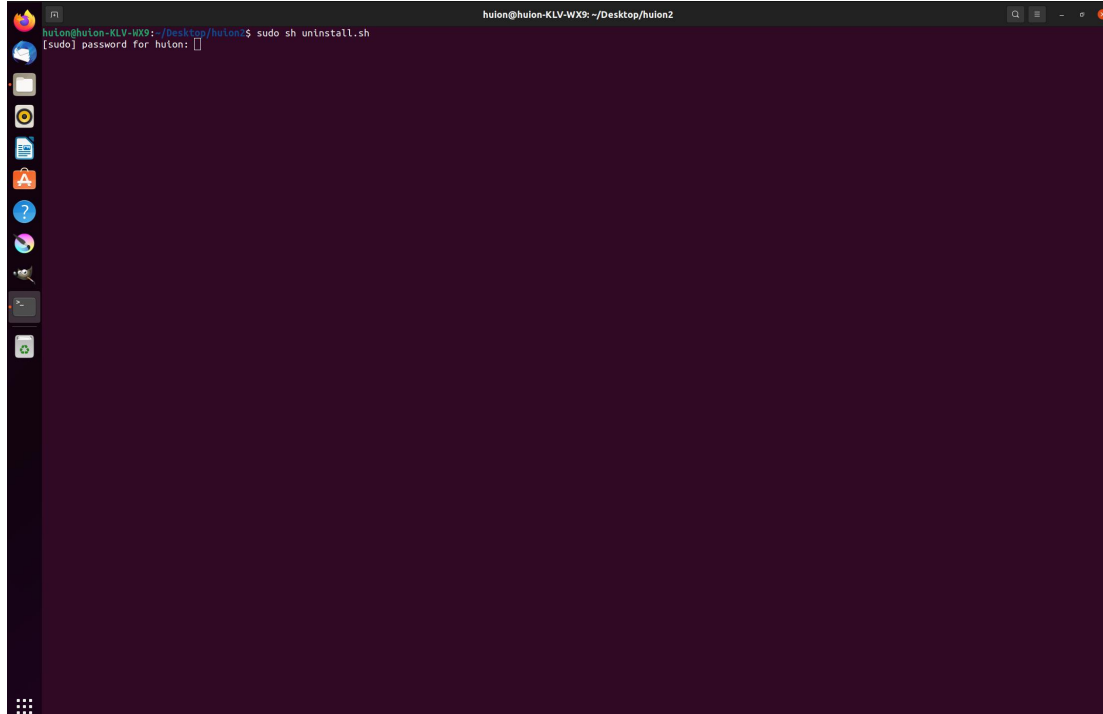

3. Enter the user password to complete the uninstallation.

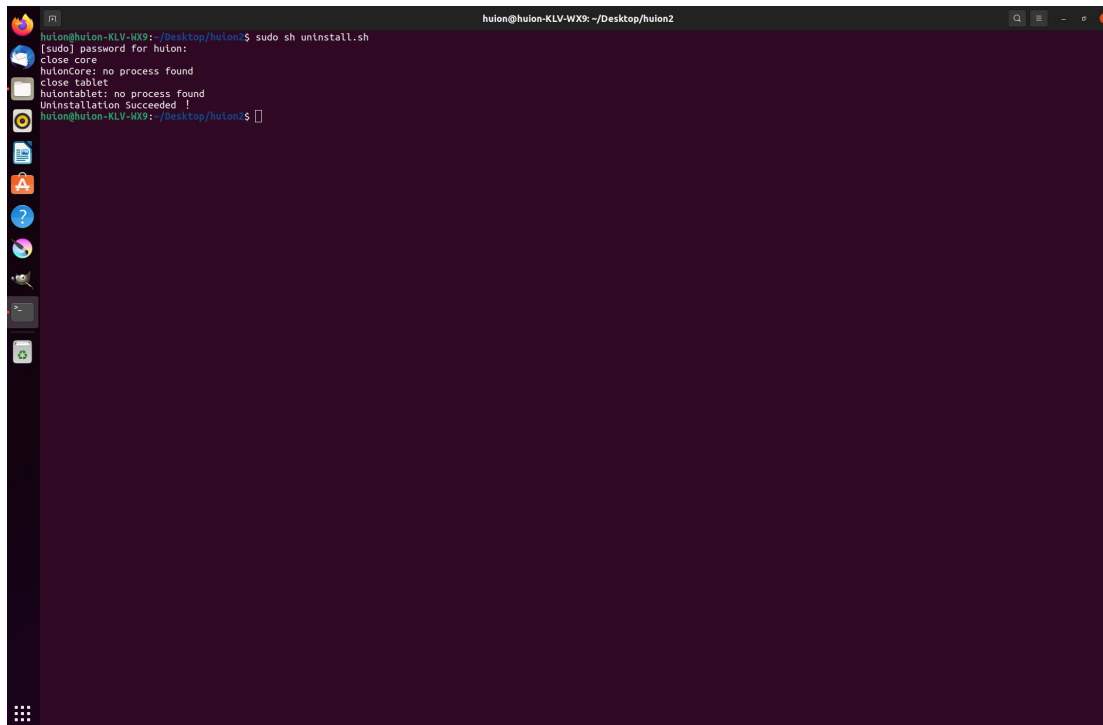

```
huion@huion-KLV-WX9: ~/Desktop/huion2
huion@huion-KLV-WX9: ~/Desktop/huion2$ sudo sh uninstall.sh
[sudo] password for huion:
close core
huionCore: no process found
close tablet
huiontablet: no process found
Uninstallation Succeeded !
huion@huion-KLV-WX9: ~/Desktop/huion2$
```

2. Instructions for installing the driver package file in deb format.

Linux operating systems supported:


Ubuntu


Steps to Install:

1. Open the folder and double-click the driver file in deb format to enter the system default interface of installing the driver on the application store, then click to install.




2. Enter the user password to complete the installation.

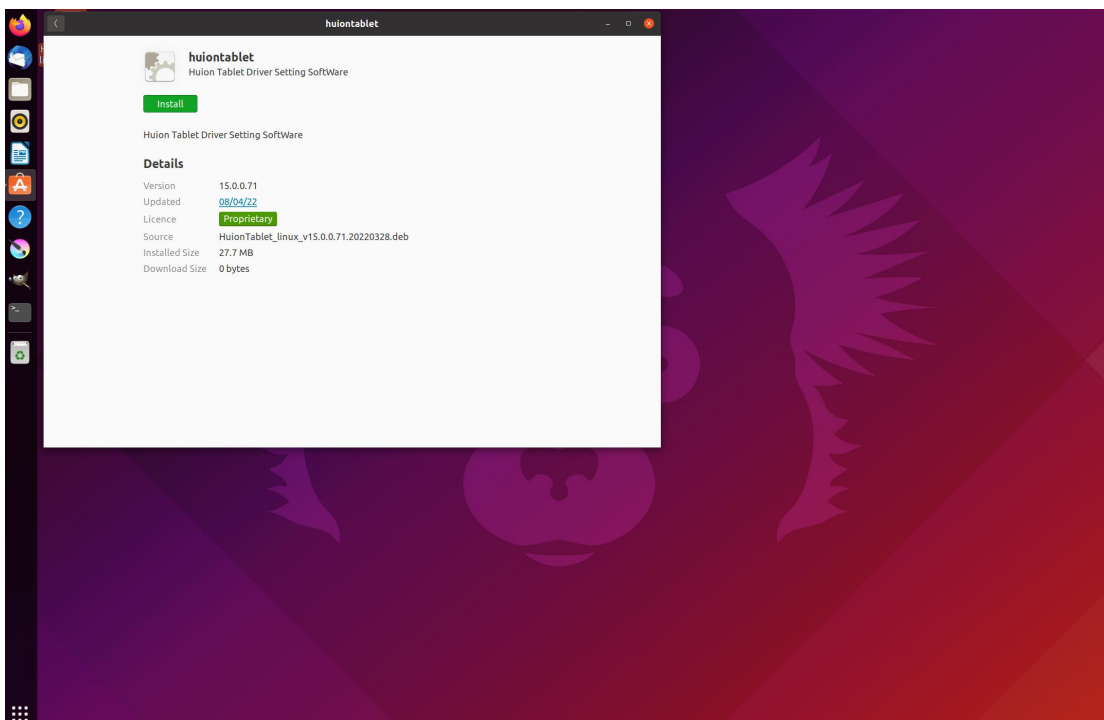

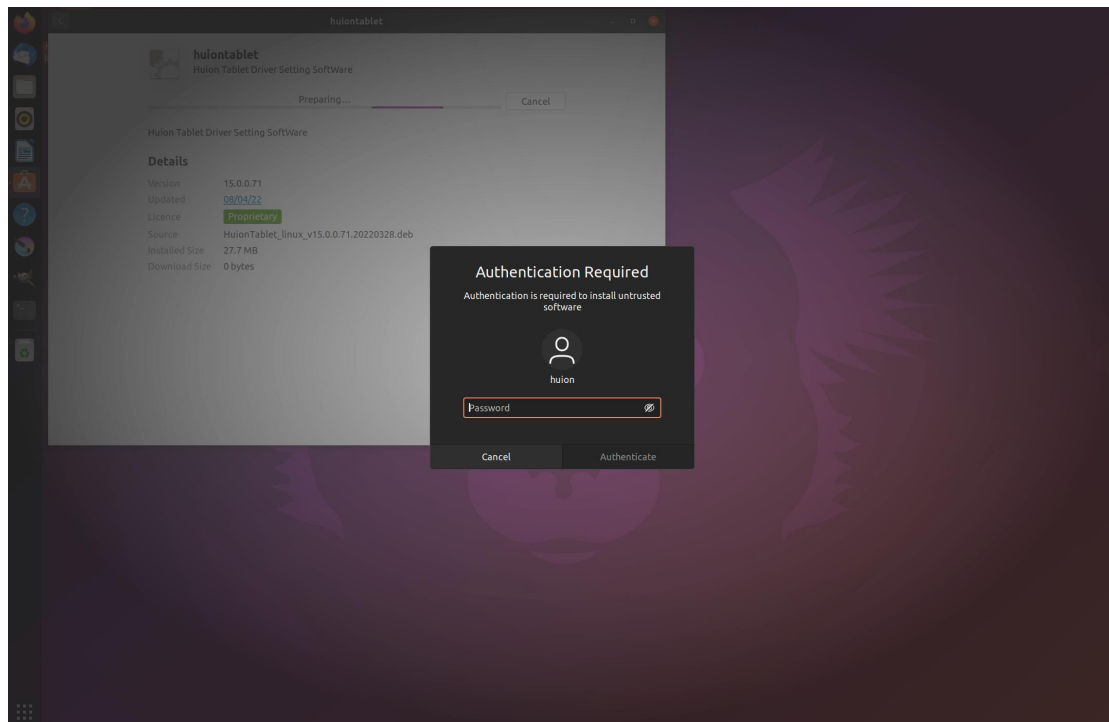


3. Please reboot your Linux device to run the driver, or the driver will not be useful.

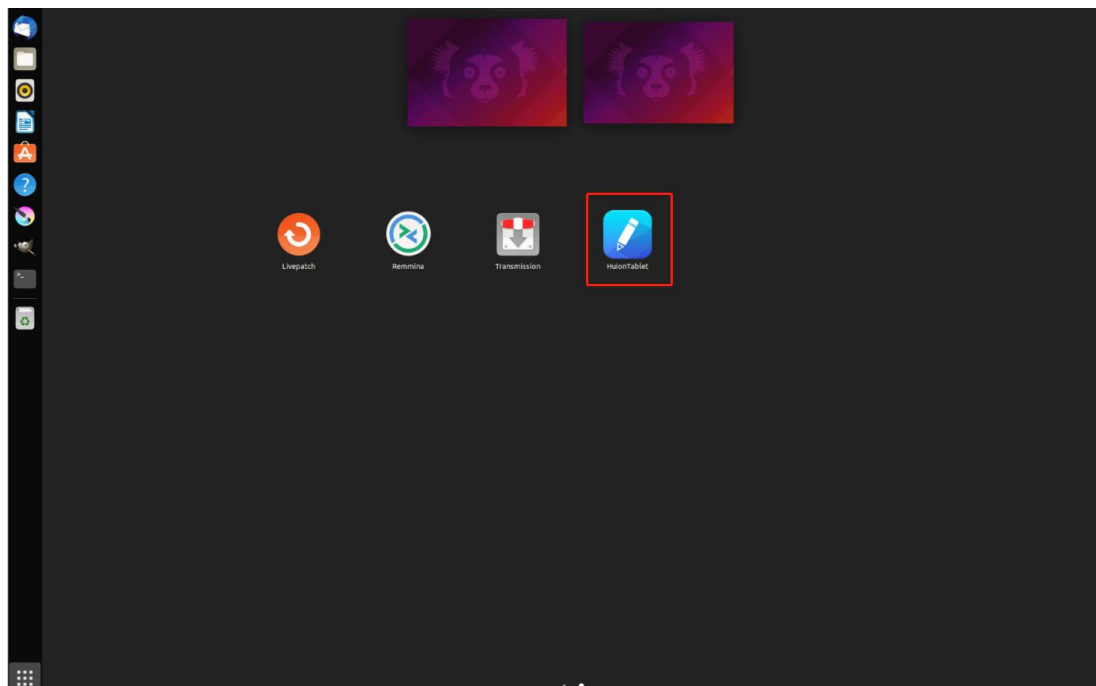

Tips: Please ensure that your Linux device has been connected to the internet when installing the driver, or the installation will fail when entering the application store interface.

Steps to Uninstall:


1. Enter the interface of the installed applications on the system's built-in application store.
2. Find the driver and click to uninstall it.

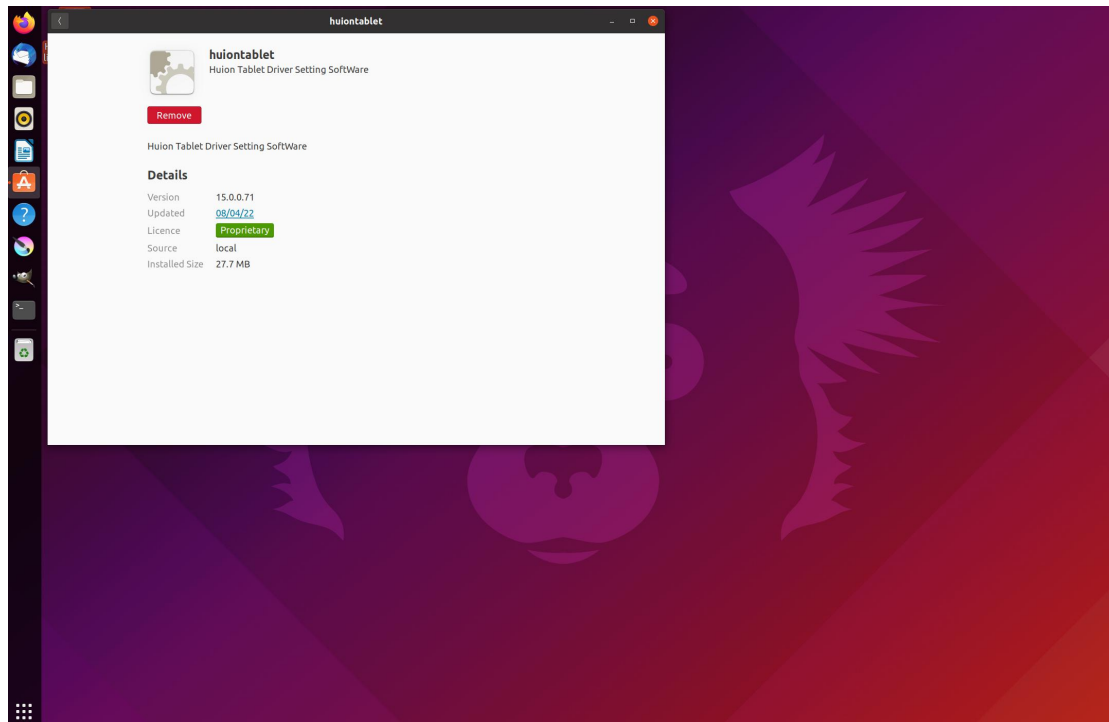

Tips: If you can't access the system's built-in application store, you can search out the driver file, `huiontablet_xxx.deb`, then double-click it to enter the installation interface, and click the remove button to uninstall it.

1.5 Pen Nib Replacement

The nib will be wear out after using for a long time, then you need to replace a new nib.

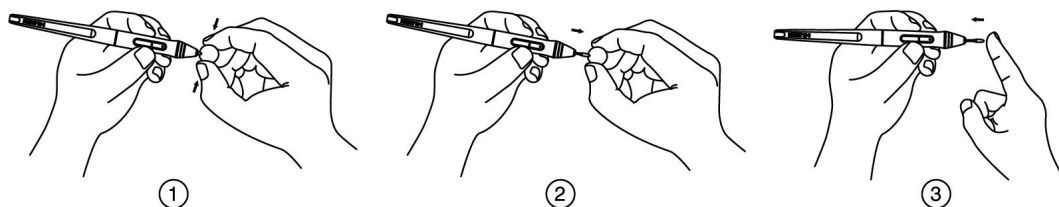

2. Product Basic Operation

2.1 Using The Pen

2.1.1 Hold the pen

Hold the pen as you hold a normal pen or pencil. Adjust your grip so that you can toggle the side switch easily with your thumb or forefinger. Be careful not to accidentally press the switch while drawing or positioning with the pen.




Notice: When not in use, place the pen in the pen case or on the desk. Do not place the pen on the surface of screen, which may interfere with the use of other screen cursor positioning equipment, it may also cause your computer unable to enter the sleep mode.

2.1.2 Position the cursor


Move the pen slightly above the active area without touching the screen surface, the cursor will move to the new position accordingly.

Press the pen tip on the screen to make a selection. Tap the screen once with the pen tip, or touch it to the screen with enough pressure to register a click.

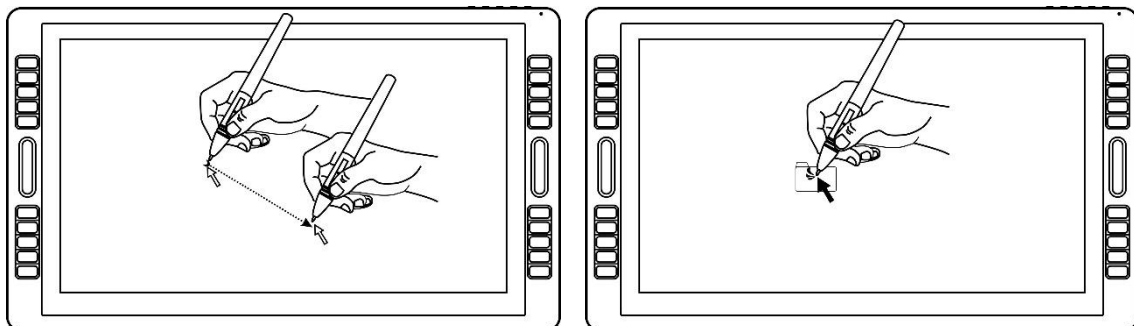


2.1.3 Click

Use the pen tip to tap on the screen once to produce a click. Tap to highlight or select an item on the screen and double-click to open it.

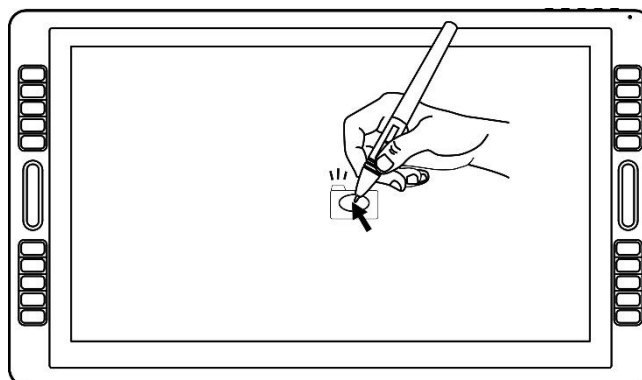

2.1.4 Move


Select the object, then slide the pen tip across the screen to move it.

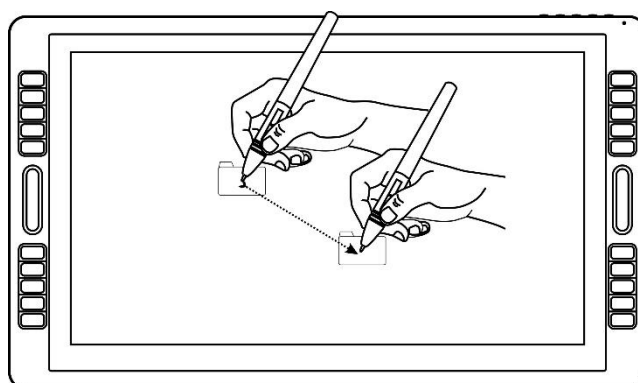

2.1.5 Use the side buttons

The side buttons of the pen can be set to two different customizable functions. You can use the buttons whenever the pen tip is within 10mm of the display active area.

You do not have to touch the pen tip to the display in order to use the switch.

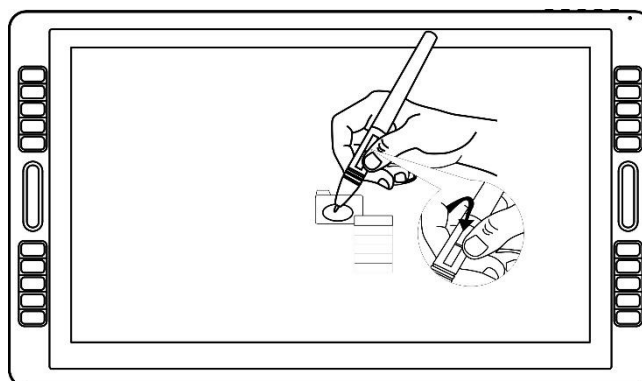

2.2 OSD Setting

2.2.1 OSD Buttons



POWER : Power on/off the display.

MENU : Press to call up the menu, after entering menu, it' s function is confirm.

+ : After entering menu, it' s function is to up/right/increase.

- : After entering menu, it' s function is to down/left/decrease.


AUTO : Before entering menu, it' s function is auto adjustment. After entering menu, it' s function is back to previous menu.

2.2.2 Brightness Setting




1. BRIGHTNESS: Adjusting background brightness of the screen images.press the buttons "+" and "-" to increase and decrease brightness.
2. CONTRAST: Adjusting difference between darkness and brightness of the screen. Press the buttons "+" and "-" to increase and decrease contrast.
3. ECO: There are four eco modes of "STANDARD, TEXT, GAME, MOIVE" .
4. DCR: Choosing "on/off" to on/off Dynamic Contrast Ratio.

2.2.3 Image Setting

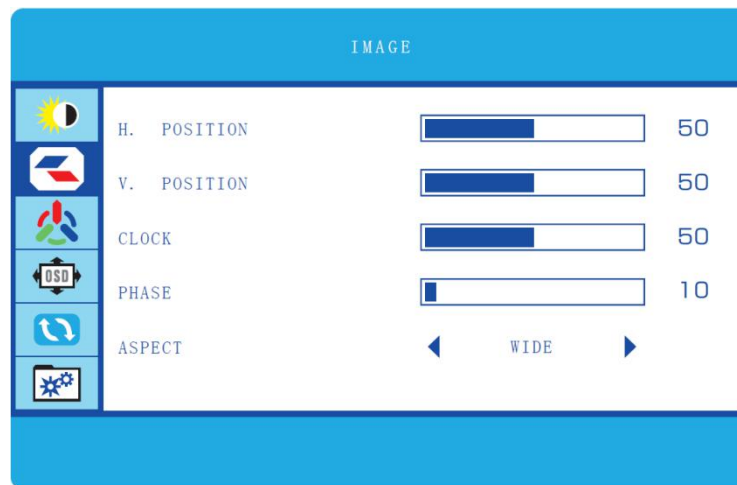

1. H.POSITION: Adjusting images left and right by using the buttons "+" and "-" .
2. V.POSITION: Adjusting images downward and upward by using the buttons "+" and "-" .
3. CLOCK: Adjusting the vertical blinking of characters on the screen.
4. PHASE: Adjusting the horizontal blinking of characters on the screen.
5. ASPECT: There are "WIDE" and "4:3" two modes for you to adjust the aspect of the screen.

2.2.4 Color Temp. Setting

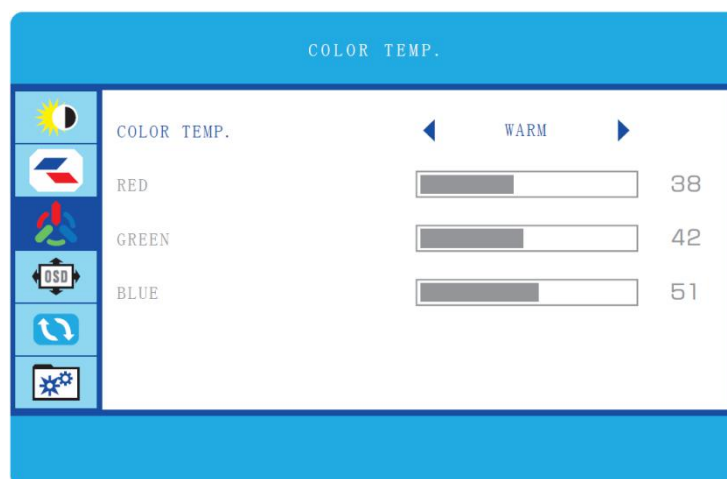


COLOR TEMP.: There are three color modes of "WARM, COOL, USER ".

2.2.5 OSD Setting




1. LANGUAGE: There are 12 languages for your choice.
2. OSD H. POS.: Adjusting the OSD position left and right by using the buttons "+" and "-".
3. OSD V. POS.: Adjusting the OSD position downward and upward by using the buttons "+" and "-".
4. OSD TIMER: Increase and decrease the residence time of the OSD menu by using the buttons "+" and "-".
5. TRANSPARENCY: Press "MENU", then "+" and "-" to adjust the transparency of the OSD menu.

2.2.6 Reset

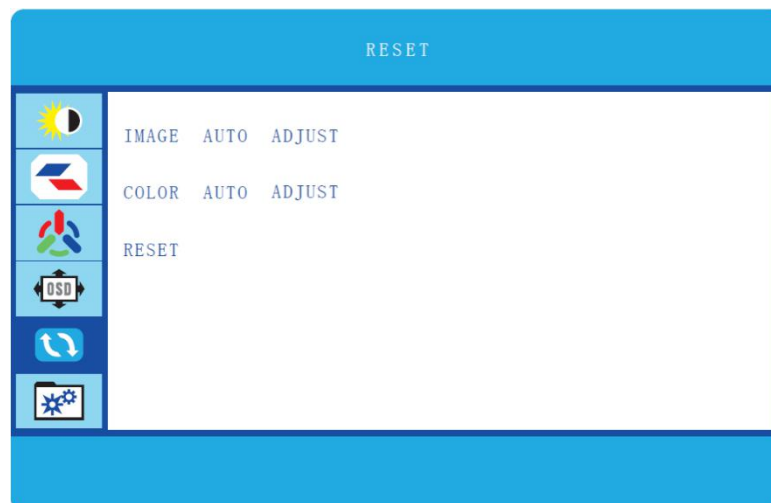

1. IMAGE AUTO ADJUST: Automatically adjust the image's horizontal/vertical position, focus and clock.
2. COLOR AUTO ADJUST: Automatically adjust the image color balance.
3. RESET: All the setting options will be restored to the default setting.

2.2.7 MISC

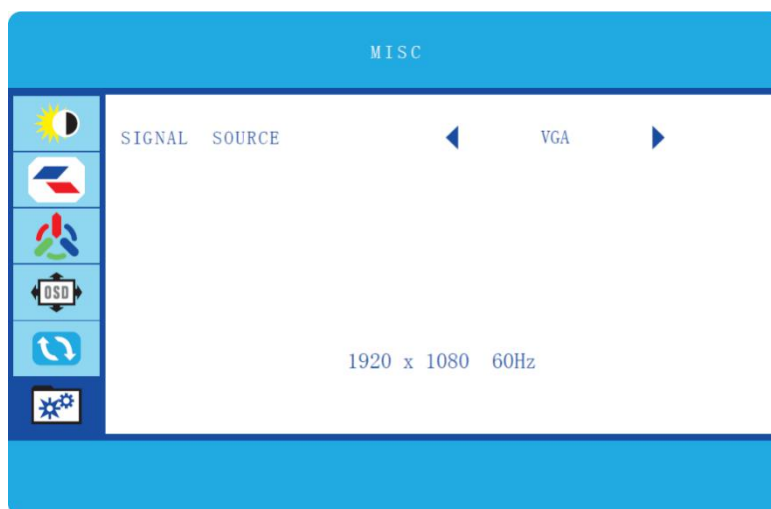


MISC: Display the current adjustment information.

3. Function Setting

3.1 Device Connection Prompt

1. Device disconnected: The computer does not recognize the tablet.
2. Device connected: The computer has recognized the tablet.

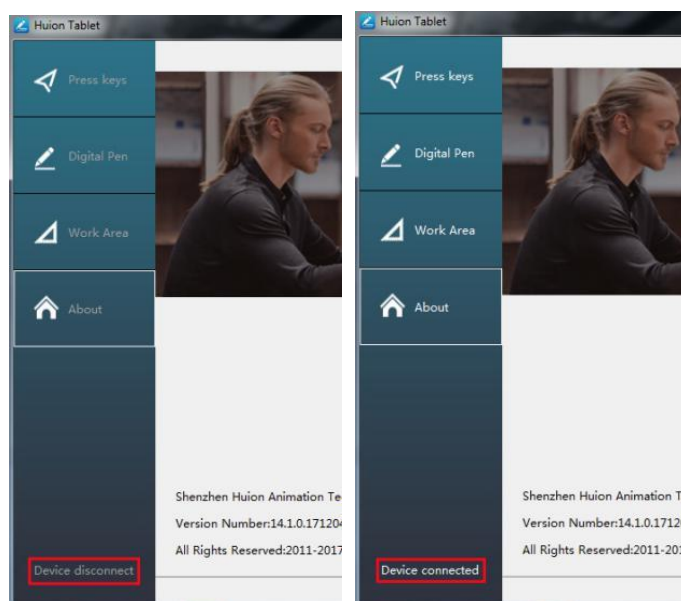


3.2 Working Area Setting

3.2.1 Using Multiple Monitors

When the KAMVAS and other monitors are used in the same system, the movement of the screen cursor on the standard display depends on the system configuration.

If the secondary display is a mirrored mode connection, KAMVAS and another monitor will display exactly the same image and screen cursor movement.


If you are in the extended display mode, you need to set the display on the driver that which portion of the display screen your KAMVAS will map to.

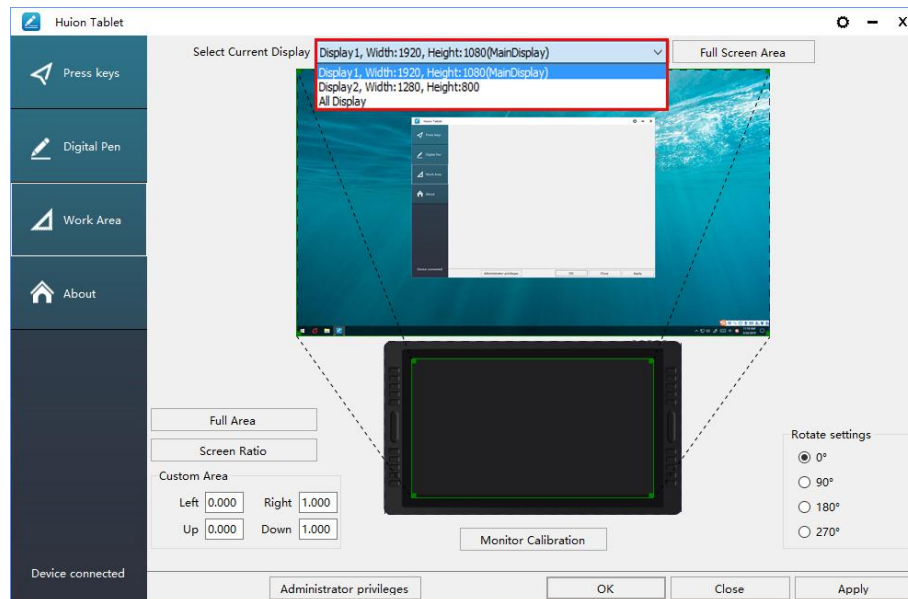

3.2.2 Working Area Setting


Define the display area that will be mapped to the screen area.

1. Full Area: the entire active area of the Display. This is the default setting.
2. Same Ratio with LCD.
3. Customized Area: 1.> Enter coordinate values. or2>. Drag the corners of the foreground graphic to select the screen area.

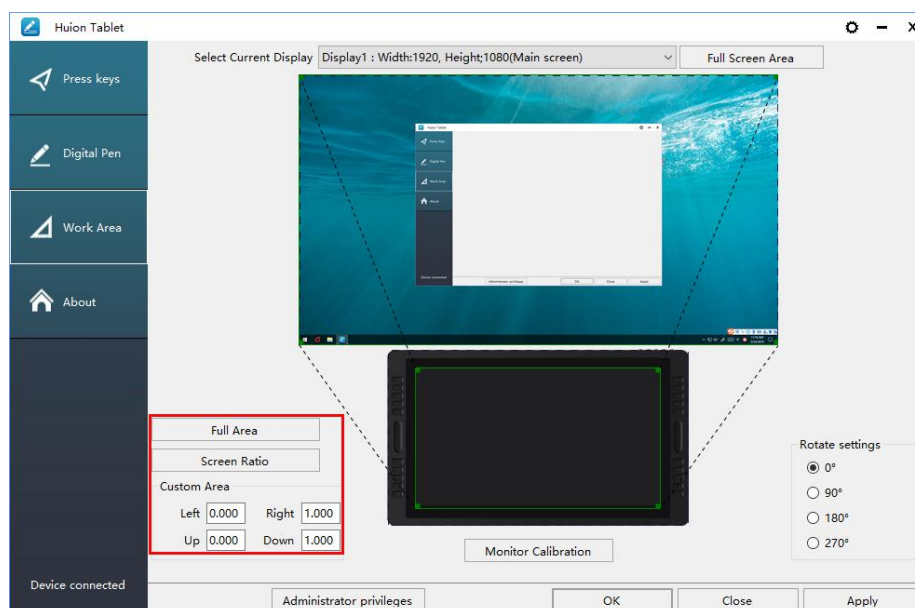

3.2.3 Rotate Working Area

By changing the direction of the tablet to adapt to the left and right hand operation. You can rotate the tablet by 0°, 90°, 180° or 270°.

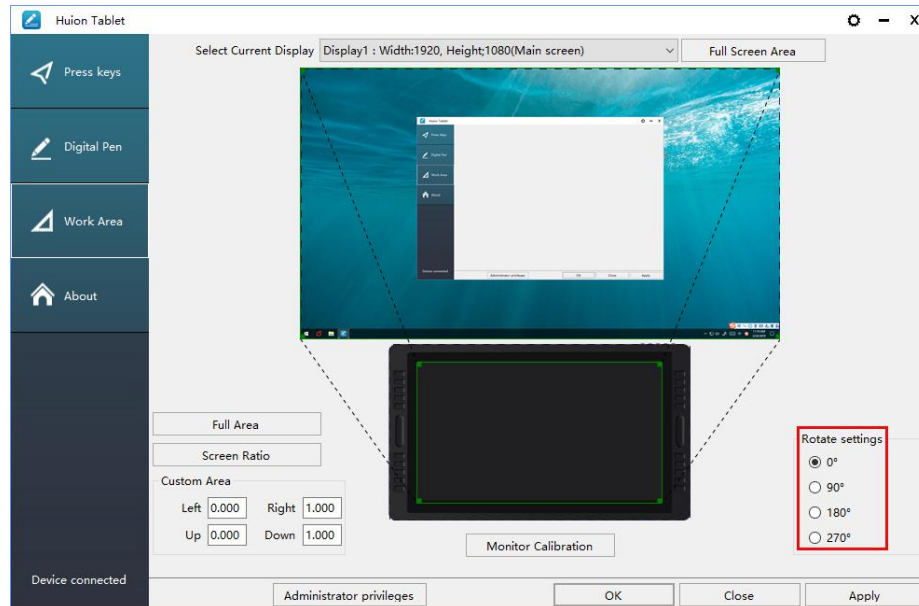

3.3 Press Keys Function Setting


Default Setting: Place the cursor on the button or click the button icon to see the default values for the press keys.

Customized Setting: Select the function to be achieved on the pop-up dialog box, then click APPLY or OK to take effect. (The press keys on the left and right side are the same function, so you just need to set the keys functions on the left side)

Touch Bar: you can slide up and down to achieve zoom function.(Also support Self-customized)


Enable/Disable Press Keys: Check/Uncheck " Enable Press key"

Enable/Disable Touch Bar: Check/Uncheck " Enable Touch"

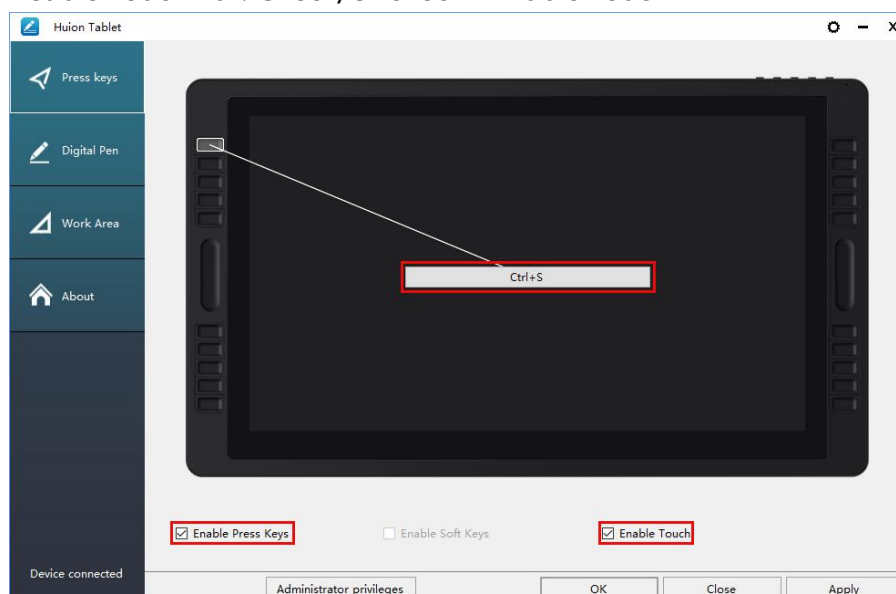


3.4 Pen Button Function Setting

Select the function to be achieved on the pop-up dialog box, then click APPLY or OK to take effect.

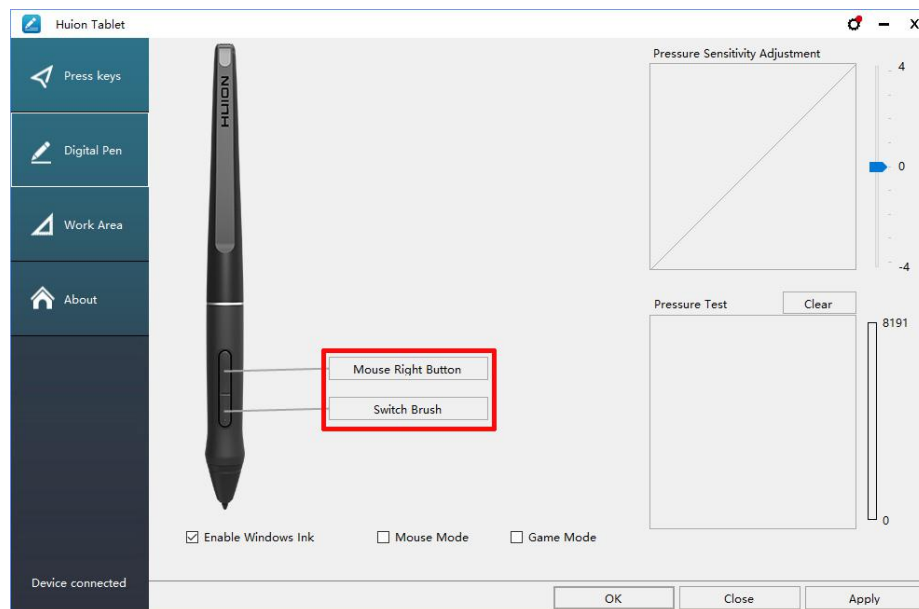


3.5 Pressure Sensitivity Setting

The pressure sensitivity will be changed by dragging the slider up and down, the smaller the value, the more sensitive the pressure.

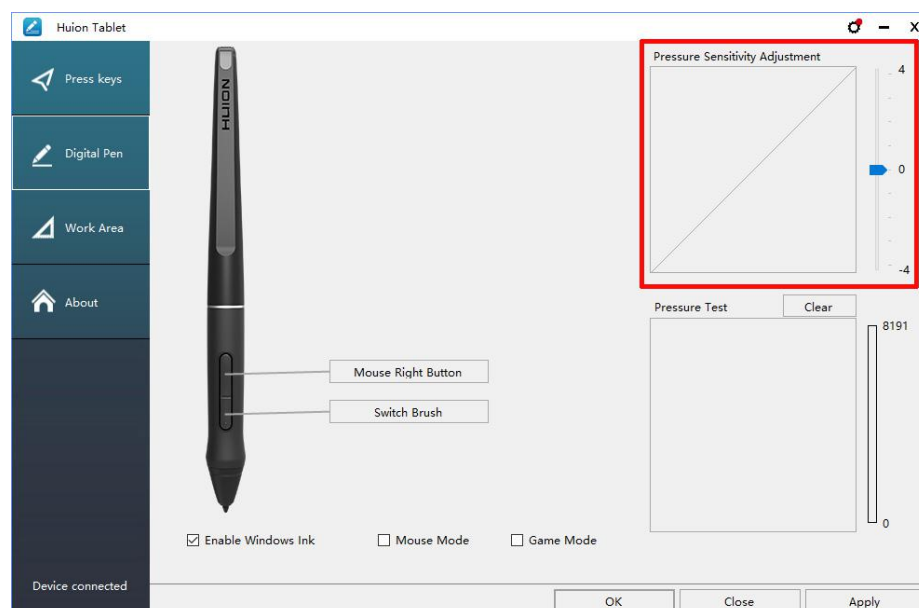

3.6 Pen Pressure Testing

Click "start pressure test", you can gradually apply pressure to the stylus on the screen to test the pressure level. Click "Clear" button to clear all the ink.

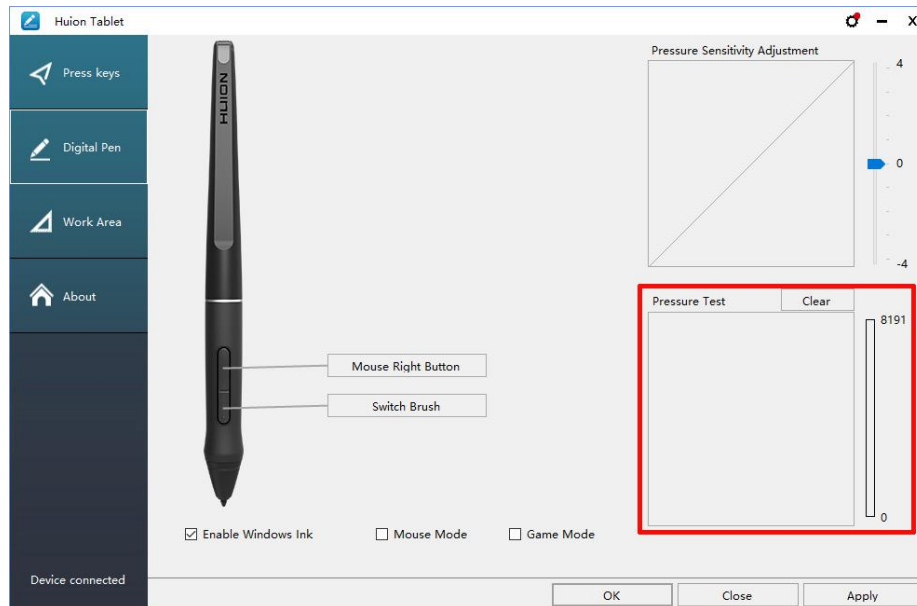


3.7 Calibration

Screen Calibration: Click the red point of the cross center appearing on the screen to complete the calibration.


Restore Factory Settings: Click "Restore Default" to restore to the factory settings.

Cancel Calibration: Click "Cancel calibration" or press ESC on the keyboard to cancel the calibration.

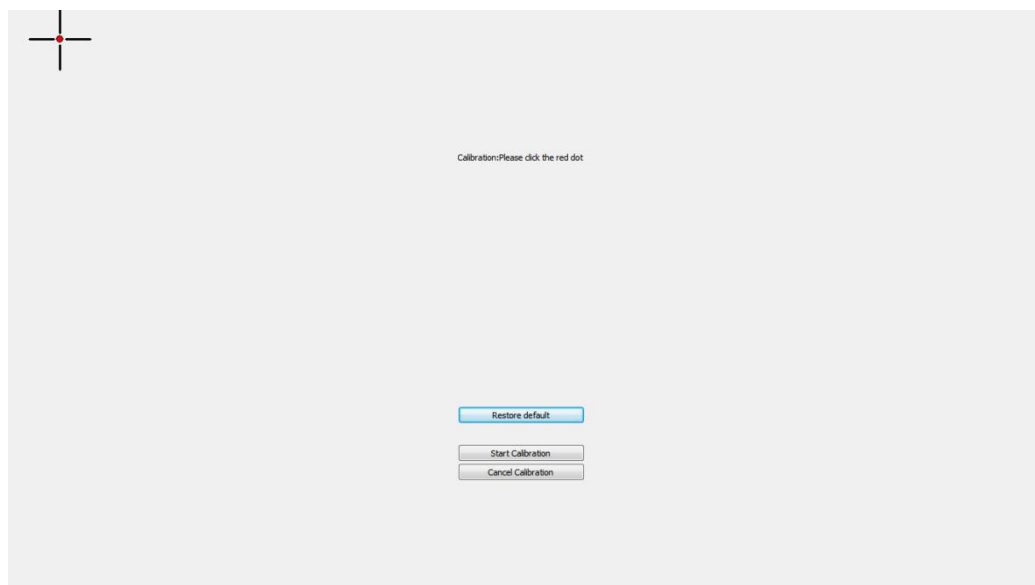


3.8 Enable the Windows Ink feature

Microsoft Windows provides extensive support for pen input. Pen features are supported in such as Microsoft Office、Windows Journal、Adobe Photoshop CC、SketchBook 6 and so on.

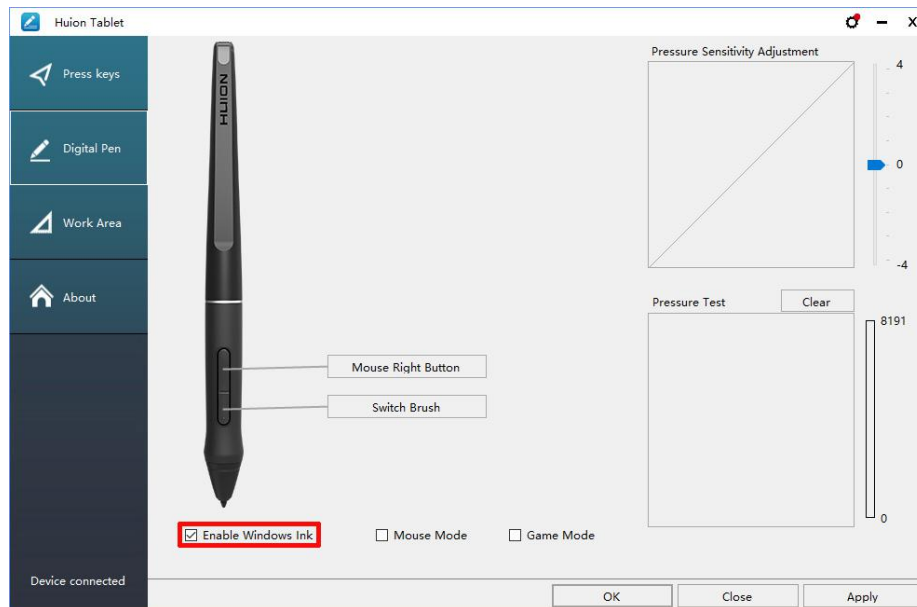

3.9 Data Export and Import

The driver supports exporting and importing your customized configuration data of the product, which is convenient for you to use different software and avoid the trouble of repeated settings.

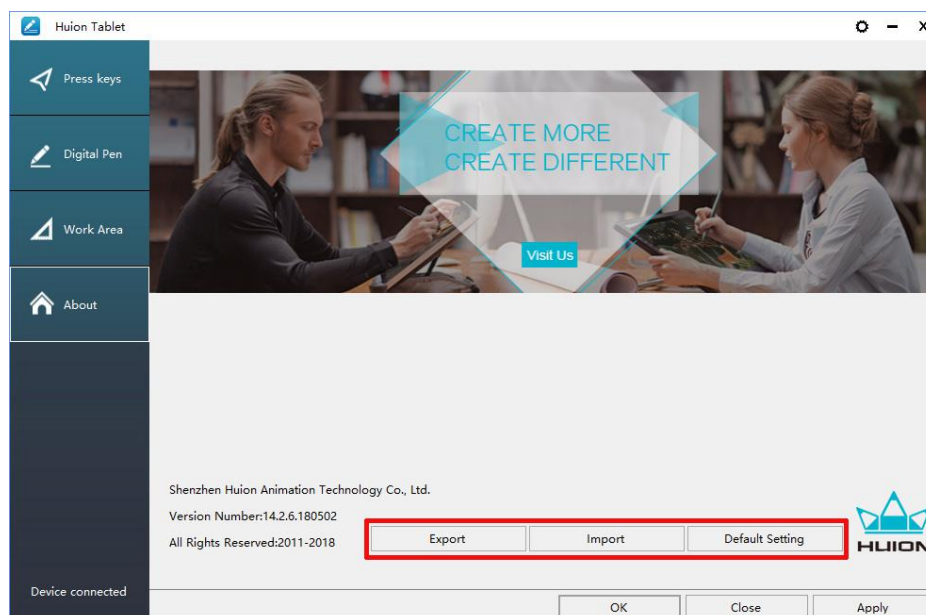

4. Specifications

Model		GT2201
Screen	Panel Size	21.5 inch
	Resolution	1920 x 1080(16:9)
	LCD Type	TFT LCD IPS
	Active Area	476.64 x 268.11mm
	Contrast Ratio	1000:1
	Brightness	250cd/m ²
	Response Time	14ms
	View Angle	89°/89°(H)/89°/89°(V) (Typ.)(CR > 10)
	Gamut	120% sRGB
	Display Color	16.7M
Touch	Touch Type	Battery-Free Electromagnetic Resonance
	Resolution	5080LPI
	Pressure Level	8192
	Accuracy	±0.5mm (Center) ,±3mm (Corner)
	Sensing Height	10mm
	Report Rate	266PPS
Pen	Model	PW500
	Pressure	8192 Levels
	Accuracy	±0.3mm
	Buttons	Two Customized Press Keys
General	Touch Bar	Two Customized Touch Bars
	Press Keys	20 Customized Press Keys
	Working Power Consumption	24W
	Input Voltage	100-240VAC, 50/60Hz
	Output Voltage	DC12V 3A
	Video Interface	HDMI、DP、VGA
	Dimension	589 x 344 x 21mm (Without Stand)
	Net Weight	4.5KG (without stand)
	Adjustable Stand	20°- 80°
	OS Support	Windows 7 or later, macOS 10.12 or later

5. Trouble Shooting

5.1 Possible Breakdowns Related to DISPLAY

Abnormal Phenomena	Possible Solutions
Power indicator does not flash	*Make sure power is on *Check the socket and power cable
No display on the screen	<ol style="list-style-type: none"> 1. Make sure power is on. 2. Correctly connect the cable. 3. If you connect the display with a laptop, please make sure the display is on the right display mode: extend or duplicate mode. 4. Check whether the side indicator shows green, if not, it means no signal in. Please reboot your computer or reconnect the cable. 5. Is the signal wire broken or bent? If so, please replace the signal wire.
Images are blurred	Please set the display resolution with 1920 x 1080.
Lack of colors	Check the pins of the signal wire are not bent or fractured.
There is chromatic aberration	As the regional color temperature is different, so minor chromatic aberration is a normal phenomenon.
Images jitter or ripple images appear	It is likely that there is electric equipment nearby that brings about electronic interference.

5.2 Possible Breakdowns Related to FUNCTIONS

Abnormal Phenomena	Possible Solutions
Pen doesn't work and no pressure in the graphics software	<ol style="list-style-type: none"> 1. If the driver is damaged or is not properly installed, please uninstall the driver and reinstall it. 2. Try restarting your computer. 3. Try re-inserting the USB cable.
Cursor movement is abnormal	Try re-inserting the USB cable or restarting your computer.
The side button of the pen doesn't work	When pressing the side button, please make sure that the nib didn't touch the glass surface and the distance between the nib and surface is within 10mm
There is a deviation between the tip and the cursor	Try calibration

Note: Information in this manual is subject to change without further notice.

For more information, please contact us with our email: service@huion.com
Or go to our website (www.huion.com) to get the latest driver and user manual.